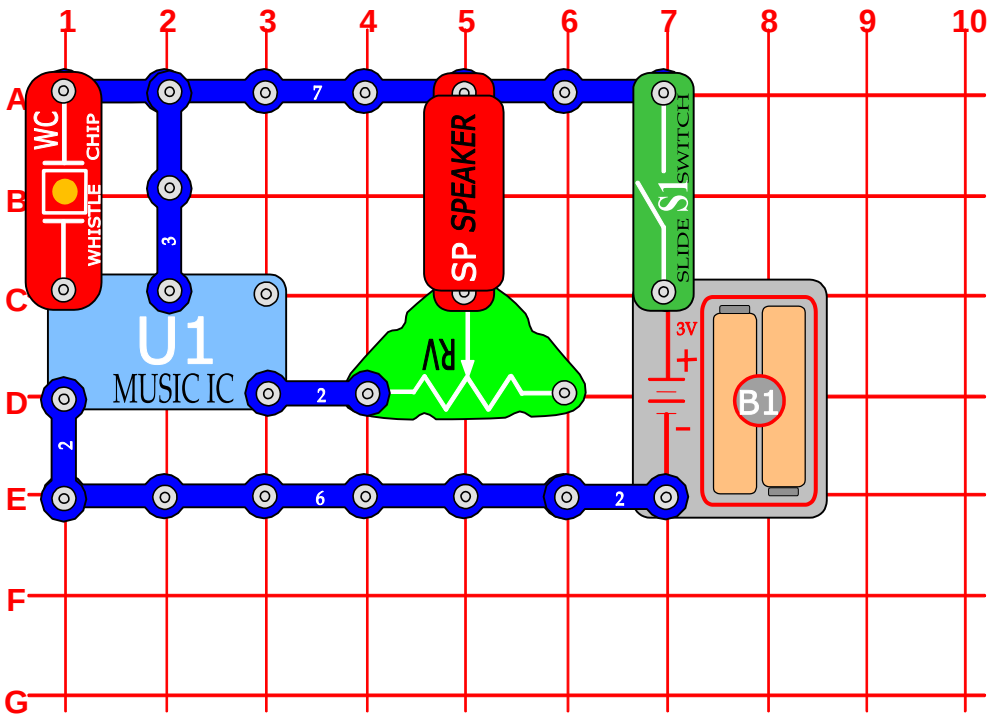

This circuit is a modified version of project #4, but adds a volume control. Turn on the slide switch (S1) and set the adjustable resistor (RV) control lever to the left. The music plays for a while, then stops. Clap your hands near the whistle chip (WC) or tap it to make the music play again for a while.

Move the adjustable resistor control to change the volume of the sound.

This circuit was suggested by Don!